GOLDAIR Pt PLATINUM

Operating Instructions

Platinum Series Electronic Panel Heaters

Models: GPPH500, GPPH510, GPPH520, GPPH530

General Care and Safety Guide

Thank you for choosing a Goldair Panel Heater. This Goldair Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front and sides of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off and use handle provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. It is recommended that this heater is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
14. A correctly specified, undamaged extension cord may be used with this heater provided it is used in a safe manner.
15. Do not remove plug from power socket until the appliance has been switched off.
16. Do not remove plug from power socket by pulling cord; always grip plug.
17. Always unplug appliance when not in use.
18. Do not locate the heater directly below any power socket during operation.
19. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
21. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
22. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
23. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. Repair work on the appliance by unqualified persons can cause serious risk to the user.
24. There are no user serviceable parts installed in the unit.
25. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
26. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
27. Indoor use only.
28. Children should be supervised to ensure that they do not play with the appliance.
29. Ensure heater is on a flat, stable, heat-resistant surface when free standing.
30. It is important that you do not cover this heater.

TECHNICAL SPECIFICATION

Model No:	GPPH500, GPPH510, GPPH520, GPPH530
Supply:	220-240VAC 50Hz
Wattage:	500W, 900-1000W, 1350-1500W, 1800-2000W

Components

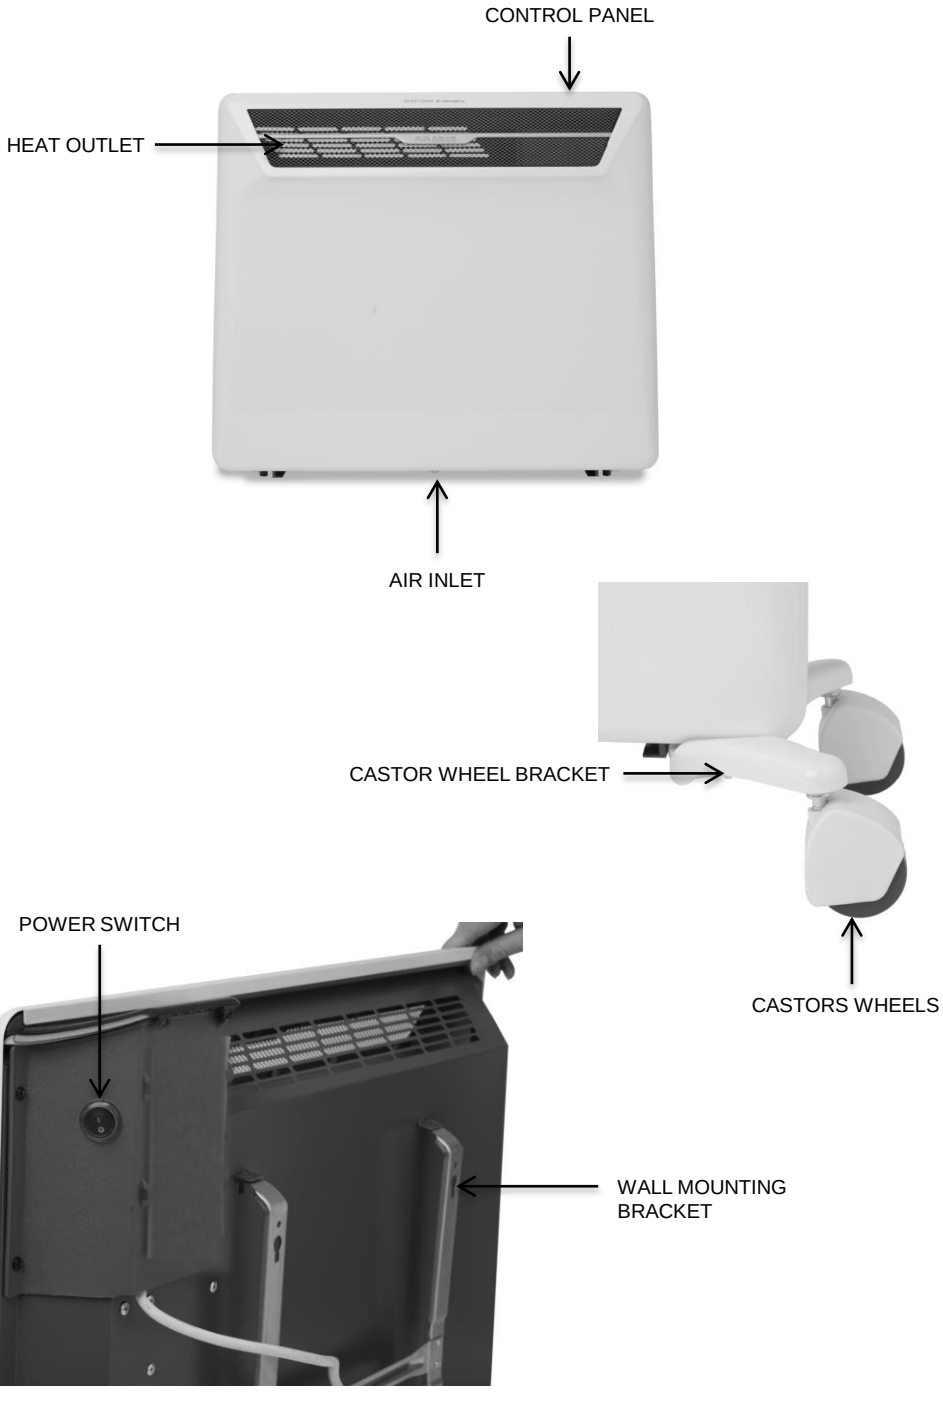
CONTROL PANEL
HEAT OUTLET
AIR INLET
CASTOR WHEEL BRACKET
CASTORS WHEELS
POWER SWITCH
WALL MOUNTING
BRACKET

Installing Your Panel Heater

FREE STANDING

1. Ensure the heater is unplugged and power switches are off.
2. Set heater upside down.
3. Align the screw hole on the Castor Wheel bracket with the screw hole on the base of the heater.
4. Attach Castor wheel bracket with the winged screws provided and ensure the bracket sits firmly in place (do not over tighten). Firmly press Castor Wheels into the slots provided on the Castor Wheel bracket.
5. Set heater upright and plug into a standard 240 volt AC electrical outlet.

The screw pack to attach the feet to your heater will be taped to either one of the feet for your heater.

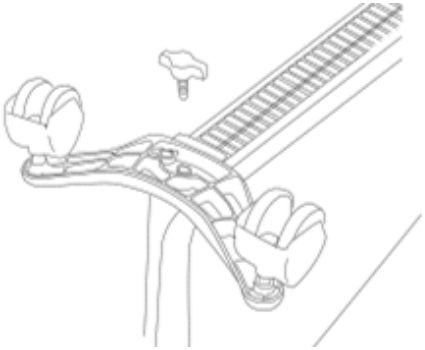

WALL MOUNTED

1. Make sure the heater is unplugged and power switches are off.
2. Position the panel heater within one metre of a wall socket. Do not mount in front of or below the wall socket. Ensure there is at least 150mm clearance on all sides of the heater.
3. Detach the mounting bracket from the back of the panel heater by unscrewing the two locking screws (located on the top of the mounting bracket).
4. Position the mounting bracket on the wall and mark the hole positions with a pen or pencil and check they are horizontal with a spirit level. Ensure the two bottom mount holes are at least 150mm from the floor and drill holes as required.
5. Secure the mounting bracket to the wall with the four mounting screws. (For masonry walls use the plastic sheaths).
6. Slot the back of the heater onto the mounting bracket locating the bottom plugs first and secure with two locking screws.
7. Plug heater into a standard 240 volt AC electrical outlet.

WALL MOUNTING POSITION

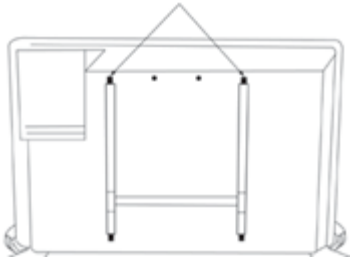

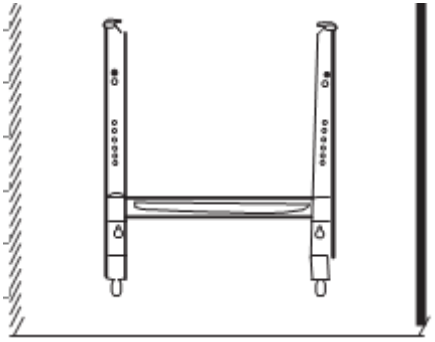

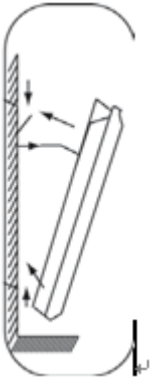

Operating Your Panel Heater

CONTROL PANEL

All Models

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed form the unit before use. Check that the heater is switched off before plugging into the mains supply.

Turn the Power switch"ON", which is on the right hand side of the heater just below the control panel.

Press the button. A beep will sound indicating the heater is either in standby mode or in the mode prior to being turned off.

Press the button to select the power setting; options are either full setting or half setting.

Set the desired temperature by pressing the UP or DOWN buttons in the normal operating mode.

Set the timing function by pressing the "SET" button in the normal operating mode, When the "TIMER" sign on the screen starts flashing, use the UP or DOWN buttons to set the desired shutdown time. From 1 to 24 hours.

Note: You cannot set a specific turn on or turn off time.

Lock the control panel while the heater is in normal operating mode or in standby:

Press and hold the UP and DOWN buttons at the same time (for 3 seconds) until the lock symbol (padlock) is displayed. All the control functions are now locked, and the buttons will no longer operate until unlocked.

Use the same sequence to unlock the control panel.

The heater is fitted with an "anti-frost" mode which can be activated by pressing the SET button twice. This will illuminate the symbol on the control panel and the heater will automatically come on if the temperature drops below 7 degrees. Note the heater has to be turned on for this function to work. To deactivate this mode press the SET button again.

Cleaning and Maintenance

CLEANING YOUR HEATER

The heater requires regular cleaning to ensure trouble free operation:
Unplug the heater from the mains supply before cleaning.
Ensure that the heater has been allowed to cool down completely before cleaning.
Use a damp (not wet) cloth to wipe the exterior of the heater to remove dust and dirt.
Use a vacuum cleaner to remove dust and fluff from the inlet and outlet grills.
To clean behind the heater (when mounted on a wall); unfasten the two locking screws located on the top of the mounting bracket, press down on the two release catches on the mounting bracket to tilt the heater forward.
When the heater is tilted forward, it is easier to clean behind it.
It is important to return the heater to its original position after cleaning and to refasten the locking screws.
Ensure the heater is dry before plugging back into the mains supply.

IMPORTANT! NEVER COVER THIS HEATER!

CAUTION

The heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not use this heater with a separate programmer, separate timer, separate remote-control system or any other device that switches the heater on automatically.

WARNING: Keep all objects at least 1 metre from the front and sides of the appliance.

WARNING: Take care in positioning your heater, using the Timer will mean the heater will come on automatically. Fire may result if placed next to combustible material.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand
Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia
Monday – Friday 8am-5pm
Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@cdbgoldair.com.au

Three Year Warranty

Thank you for purchasing this Goldair Platinum product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **three years.** In non-domestic use Goldair limits the voluntary warranty to **three months.**

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand
CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia
CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 Goldair (1300 465 324)
www.goldair.com.au

Goldair Three Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

_____

Address _____

_____

_____

_____

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card

Due to continual design improvements, the product illustrated in this User Manual may differ slightly from the actual product.